



New

Reagent A

5 Easy Steps


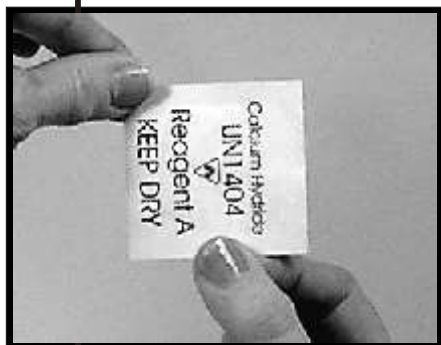


1. Hold the sealed calcium hydride packet by one side and flick the opposite side of the packet several times with your finger to cause the granules to flow to the side of the pouch which is facing down.

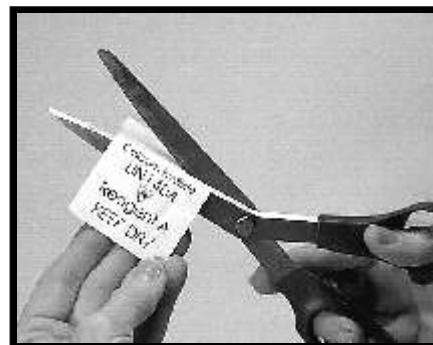

2. Using a pair of scissors, cut the top of the packet off, just above the words, "Calcium Hydride".

3. Insert a pencil into the top of the pouch to open it. Slide the pencil down the side of the pouch where the calcium hydride is located. Be careful not to puncture the pouch.

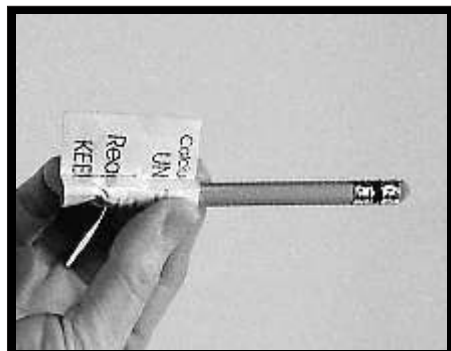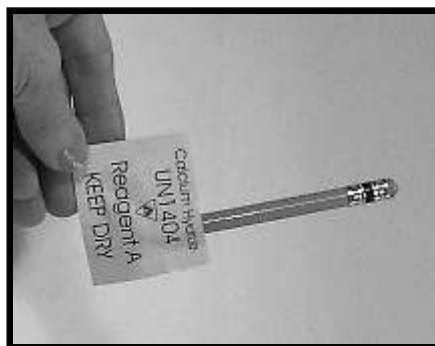

4. Roll pouch tightly around the pencil. You now have a cylindrical opening from which to pour the calcium hydride.

5. Remove pencil and pour contents into the Reagent Chamber tapping the bottom of the pouch to dislodge all the powder.



Reagent Chamber

119A Sandy Drive
Newark, DE 19713 U.S.A.
Telephone - 302-456-0446
Fax - 302-456-0441
esd@esdinc.com - E-Mail

Sandy Brae Laboratories